

GLAS*Source*

Highlight / Prestige Series Shower Enclosure

INSTALLATION INSTRUCTIONS

Model Numbers

SHOWER ENCLOSURES
SS11135
PSS11135

NEO ANGLE

















When Ordering Repair Parts, Please
Give The Following Information:

1. Model Number
2. Part Number
3. Part Description
4. Color

To install your shower enclosure, you will
need the following:


- Level
- #31 Drill Bit
- Glazing Block
- Hack Saw
- 3/16" Carbide Drill Bit (for tile walls)
- Phillips Screwdriver
- Silicone

Door Here
MD1000/
PD1000

Description	Qty.	Part #	Picture
1. Wall Channels	2	D11006	
2. Wall Anchors	6	V-935	
3. 8 x 1 1/4" Screws	6	ZS8X114	
4. 6 x 3/8" Screws	12	ZS6X38	
5. Headers - Mitered 22.5 degrees	3	SS-1101	
6. Curbs - Mitered 22.5 degrees	3	SS-1101	
7. Glass Support Blocks	4	V-902	
8. 135-Degree Glass Panels	2		
9. Vertical Seal Vinyl	8	V-909	
10. Horizontal Seal Vinyl	8	V-906	
11. 135-Degree Posts	2	SS-1105	
12. Header and Curb Fillers	2	SS-1102	
13. 6 x 1/4" Screws	16	ZS632X114	
14. 135-Degree Header / Curb Clips	8	C-135-19/64	
Options:			
5. Prestige Header	3	PS-1701	
6. Prestige Curb	3	PS-1701	

Note: Wall channels (1), wall anchors (2), screws (3) that are used in stall shower installation are shipped with shower door. Read both door and stall instructions before starting installation.

1. Add 3/8" to centerline measurement for center section, and 3/16" to centerline measurement for sides. Cut both header and curb center sections to size, also cut the curb side sections, leaving the header sections for latter. (Center sections may be pre-cut)**
2. Assemble header and curb with clips provided (Figure 1). Using holes provided in header and curb, use a #31 drill bit to drill holes into clips. Secure using eight 6 x 1/4" SMS Screws (13). Set curb in place and mark location on curb, leaving curb in place temporarily.
3. Set wall channels into curb and mark holes on wall. Remove wall channels and curb. Drill holes into wall using 3/16" drill bit. Place screw anchors into holes.
4. Run a 1/4" bead of silicone on underside of curb, over miters, and where the ends of the curb sits on the threshold. Apply silicone inside curb at wall and miters then tool in place.
5. Replace curb and silicone where miters are and where curb meets wall. Replace the wall channels and secure using 8 x 1 1/4" SMS.
6. Place glass-support blocks in curb and set panel glass in place, tacking at top with about 6" of the vertical seal vinyl. To adjust for wall conditions we adjust the panel in or out of the post, making sure that at least 1/4" remains in each channel.
7. Place corner post in place over the edge of glass and tack in place using vertical seal vinyl. Plumb corner post to the respective wall.
8. Check the chart for the door size, and obtain the range for the curb filler. If the distance between the wall channel and the corner post falls within this range then cut curb filler to size. If the measurement does not fall into the range then a larger or smaller door is needed. Cut curb filler to size and snap in place with higher lip to outside of unit.

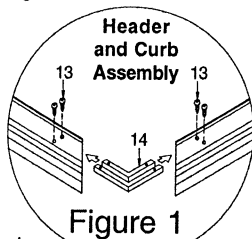


9. To cut header sides to length, measure from wall to the outside point of angle on corner post, then add 1/8" to this measurement. This is the length of the outside dimension of the header from miter point to the wall. Be sure posts stay plumb or door will not close properly.

(Refer to Shower Door Installation Instructions)

- (Door may be pre-assembled)
10. Snip excess vinyl from latch jamb, and crimp in place at top and bottom. Holding corner post slip latch jamb in place.
 11. Install 3" vinyl channel, centered on edge of door glass and tap handle or clip in place.
 12. Set door (with hinge jamb attached) over corner post. Secure hinge jamb to corner post using adjustment derived at from step #8. Use a #31 drill bit and 6 x 3/8" SMS.
 13. Stand inside shower and pull door closed. If, when you pull the door closed without creating pressure on the latch jamb vinyl, there is an opening at the top, you must decrease the length of the header over the fixed panel side where the door is hanging. If the gap is at the bottom then you need to shorten the length of the header over the fixed panel where the door latches.
 14. Using a #31 drill and 6 x 3/8" SMS to secure header to wall channels.
 15. Adjust header up or down on corner post to make parallel with top of door. Now using a #31 drill secure with 6 x 3/8" SMS to the corner post.
 16. Install rest of vertical seal vinyl at post and wall channels, and horizontal seal vinyl in header and curb.
 17. Recheck alignment of door and corner post, if out, adjust by tapping on corner post.
 18. Adjust latch jamb for a gap of 3/16" for latch to edge of door.
 19. Adjust handle or clip to meet magnet for fine adjustment if necessary.
 20. Adjust splash vinyl so that approximately 1/8" daylight space remains between bottom of splash vinyl and curb filler with the door in a closed position.
 21. Seal along inside and outside edge of metal and tile with silicone.

Header & Curb Fillers		
Min. Filler=Door Size Minus 1 7/8"		
Max. Filler=Door Size Minus 7/8"		
Model Number	Min.	Max.
MD-1000-20	18 1/8"	19 1/8"
MD-1000-21	19 1/8"	20 1/8"
MD-1000-22	20 1/8"	21 1/8"
MD-1000-23	21 1/8"	22 1/8"
MD-1000-24	22 1/8"	23 1/8"
MD-1000-25	23 1/8"	24 1/8"
MD-1000-26	24 1/8"	25 1/8"
MD-1000-27	25 1/8"	26 1/8"
MD-1000-28	26 1/8"	27 1/8"
MD-1000-29	27 1/8"	28 1/8"
MD-1000-30	28 1/8"	29 1/8"
MD-1000-31	29 1/8"	30 1/8"
MD-1000-32	30 1/8"	31 1/8"
MD-1000-33	31 1/8"	32 1/8"
MD-1000-34	32 1/8"	33 1/8"
MD-1000-35	33 1/8"	34 1/8"
MD-1000-36	34 1/8"	35 1/8"

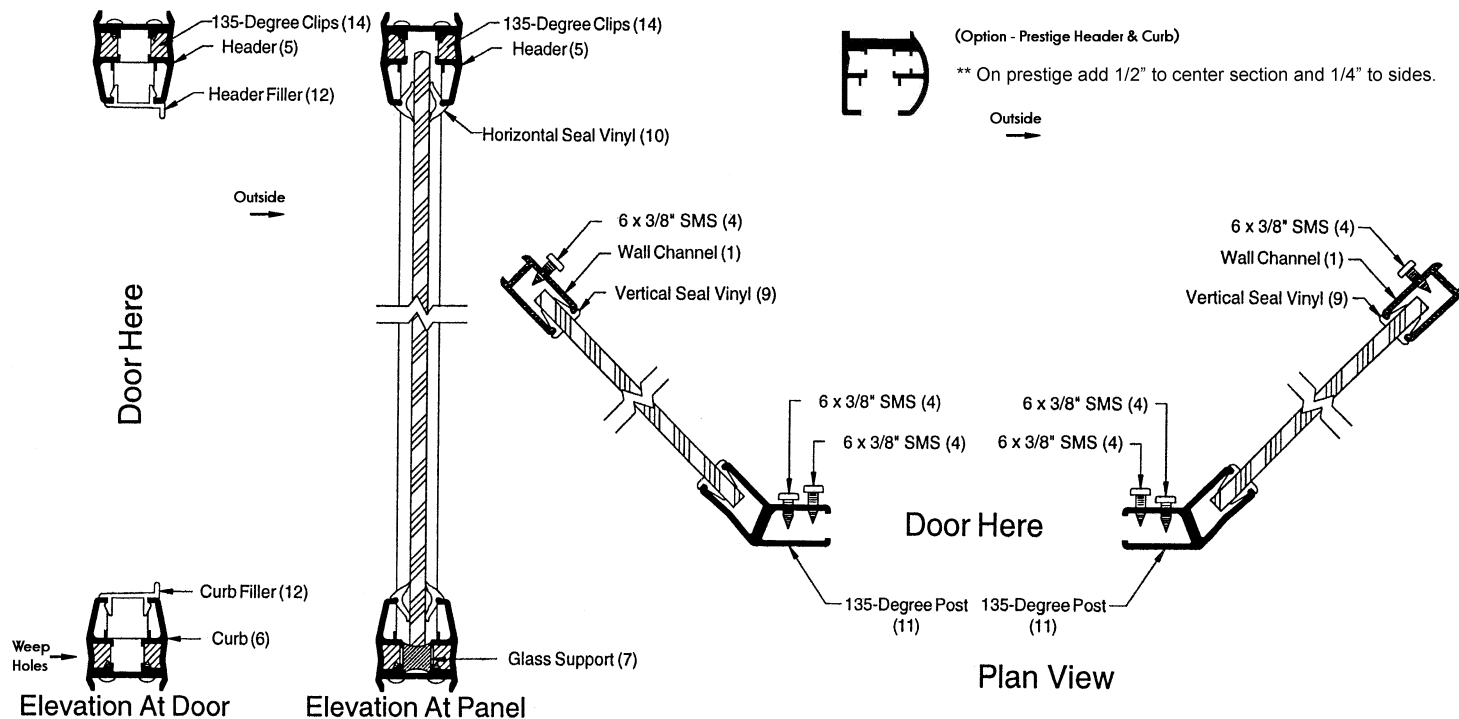

GLAS*Source*

Highlight/Prestige Series Neo Angle Stall Enclosure

Model SS11135/PSS11135 Neo Angle Shower Stall - Door & 2 - 135° Panels
Special Height and Width

QTY.	Part# & Description	How to arrive at measurement
3	SS 1101/PS 1701 header	unit width both sides
3	SS 1101/PS 1701 curb (weep holes)	unit width both sides
2	SS 1102 filler	
2	SS 1105 135 degree post	unit height minus 1-1/4" *
2	D1006 wall channel	unit height minus 1-1/4" *
1	D1504 latch jamb	unit height minus 2 3/8" *
1	D1505 hinge jamb	unit height minus 2 3/8" *
1	D1503 hinge rail	unit height minus 3 1/4" *
1	D1502 bottom rail	door glass width minus 11/16" *
1	D1508 drip trough	door glass width minus 3/16" *
GLASS 1 piece	panel width	unit width minus door width, minus 1"
	panel height	unit height minus 1"

* These parts are from a MD1000