


# Framed Door

## D3000/TE1500 Handle and Towel Bar Installation

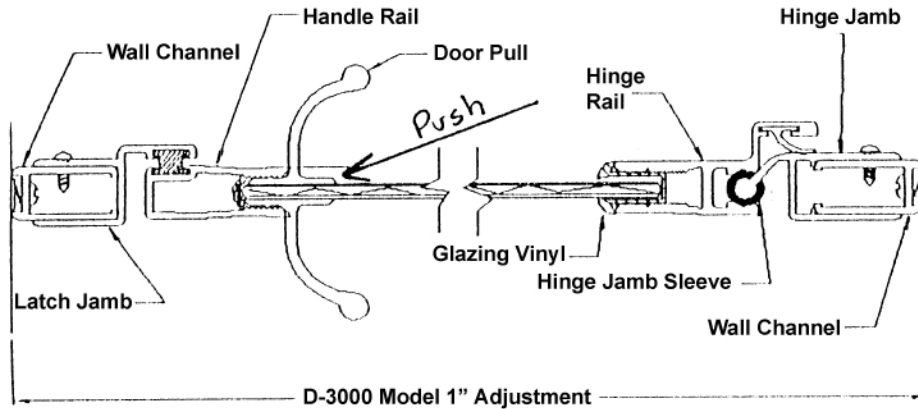

PLAN VIEW

1. Hold handle at desired height, mark bulb of vinyl.
2. With razor blade or knife cut the 3" strip along edge and in as shown.
3. Set handle on glass where vinyl was trimmed, push gently from back side with a block or putty knife as shown.
4. Handle will snap in, ridges will grip internal grooves on handle rail.
5. Repeat, opposite side.

